

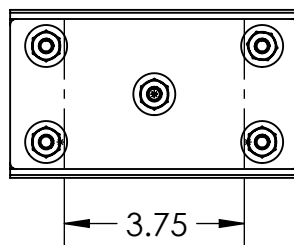



1. INSTALL 5/16 HARDWARE ONTO PLATE AS SHOWN. KEEP HARDWARE LOOSE
2. SLIDE CARRIAGE BOLTS DOWN BOTH GROOVES
3. VERIFY MOUNTING HOLE ON TRAILER MOUNTING BRACKET IS 1/2 INCH DIAMETER
4. TURN BUNKBOARD OVER AND ALIGN CENTER CARRIAGE BOLT TO MOUNTING BRACKET ON TRAILER
5. TIGHTEN CENTER 3/8 NUT
6. ADJUST BUNKBOARD INTO DESIRED POSITION AND TIGHTEN ALL CORNER NUTS

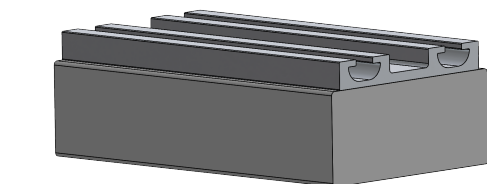

SPACING BETWEEN MOUNTING BOLTS ALLOWS FOR MOUNTING BRACKETS 3.75" LONG OR SMALLER

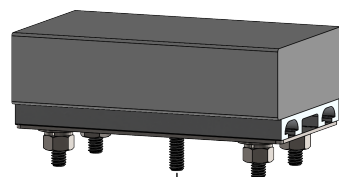

EXISTING MOUNTING BRACKET

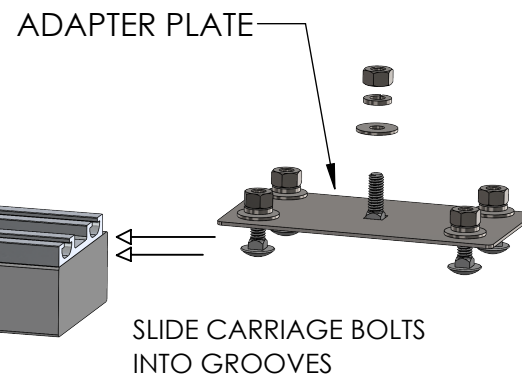

ULTIMATE
BUNK BOARDS

540 HOG MOUNTAIN RD
JEFFERSON GA, 30549

APK-1 ASSEMBLY

INTL. JG

10/7/2024

SCALE: 1:4

SHEET 1 OF 1